


1. GETTING STARTED

All you need is:

ODJOB Mixer
ODJOB PathMate
Pre-Mixed Concrete
Water
Trowel

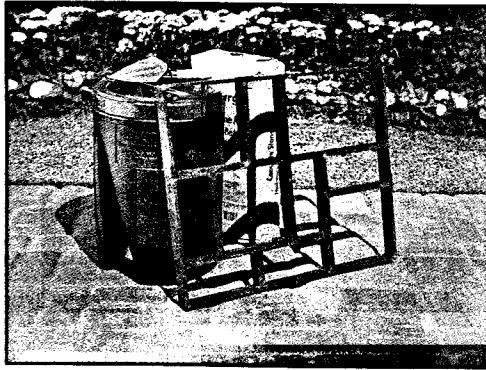

2. PREPARATION

The PathMate can be used on any relatively flat surface. You will get the best results by clearing any sod and levelling your working surface first. Plan out your job and then set your PathMate where you want to start.



3. MIXING CONCRETE

Each PathMate mould requires one 60 pound bag of concrete. Add 3 quarts of water to the ODJOB mixer (two capfuls), add the bag of pre-mix, seal the lid and roll for 30 seconds. If you require more water, add one-half cup at a time until you have a consistent mix.



4. FILLING THE MOULD

When your concrete is mixed, simply pour directly from the ODJOB mixer into the PathMate cavities. Fill the cavities you want to use and then smooth the surface with a trowel.



5. REMOVING THE MOULD

Let the concrete set for about one minute before removing the mould. Then give the mould a slight shimmy or twist and lift the mould clear of the concrete.



6. FINISHING TOUCHES

After removing the mould, smooth the edges with a trowel. You can create a variety of finishing surfaces with your trowel, or you can sprinkle on some sand to provide texture. If you want to colour the stones, simply add cement dye during the mixing process.



7. FILLING IN

You can sweep sand or soil into the spaces to fill the gaps or to permit grass to grow between the stones.




USE YOUR IMAGINATION

These are some of the patterns we have built in for you. But you can build any pattern or design that you can think of. You can mould stones on a board and use them later to fill in patterns which you have created. Let your imagination go wild!

VARIATIONS / VARIANTES / VARIACIONES


MAKING A STRAIGHT PATH

The PathMate can be used several ways to make a path. Simply abut side A to side C or side B to Side D to continue a line.

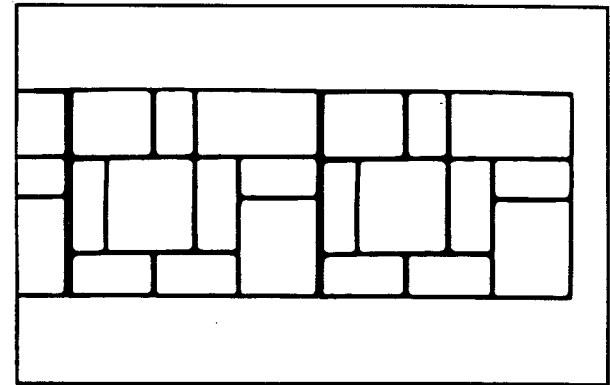


MAKING A CORNER

From your straight line, at any time you can abut the PathMate and set off in a right angle from any side.

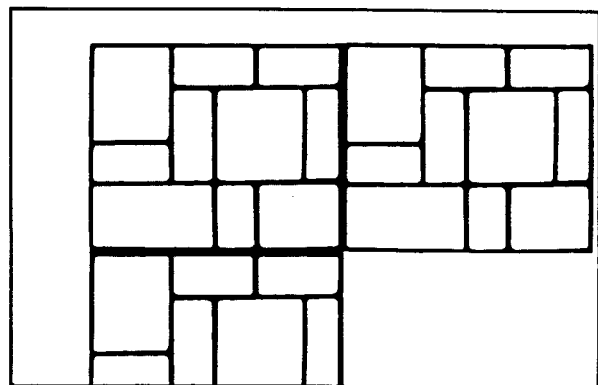

MAKING A PATIO

Because all four sides can abut to another side it is easy to fill in any area with the PathMate.

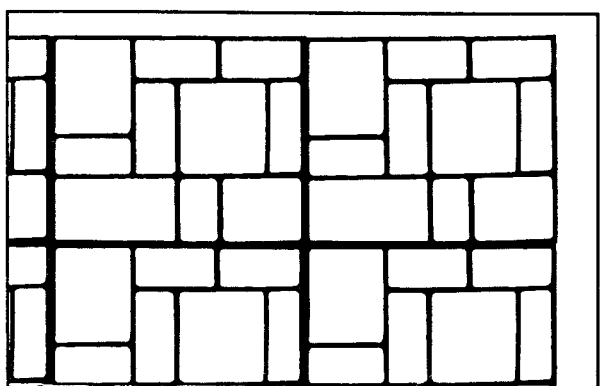

MAKING A DIAGONAL PATH

You can make an angled path by off-setting the PathMate mould. Simply align the mould halfway down one side of the previously set mould. Fill the mould and repeat the process until you have completed the desired angle.

