


SIDE DEFLECTOR KIT #P15681

for

CBR-IV Models

(AM70P/AM70S)


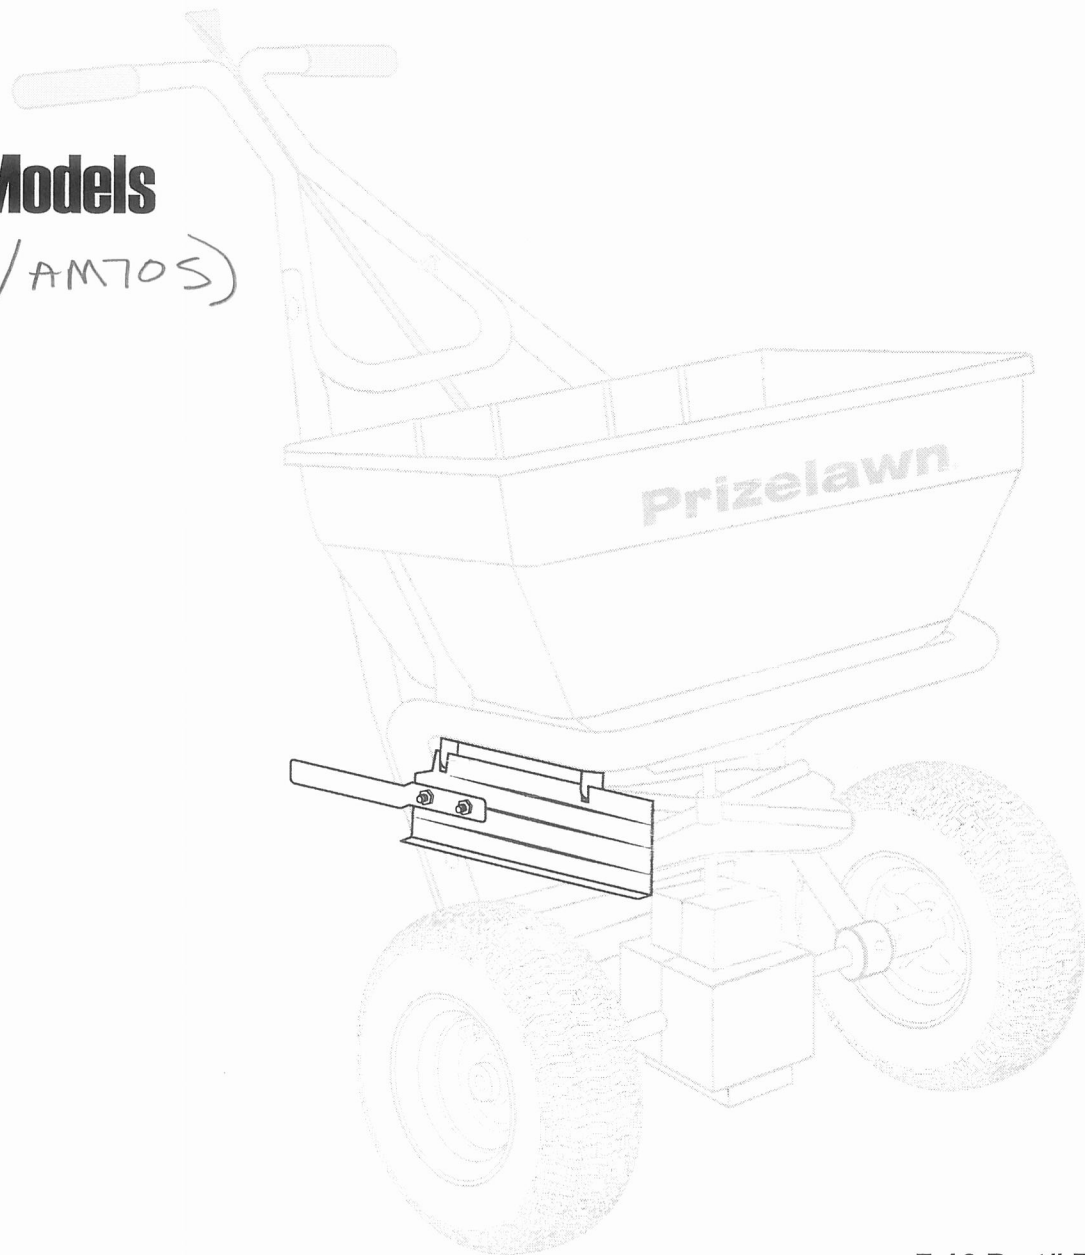


7-16 Part# P15681


Owner's Manual

ASSEMBLY INSTRUCTIONS


1. Remove components from carton. Insert either end of the spring into the hole in the frame bracket as shown. Needle nose pliers are recommended to ease installation.

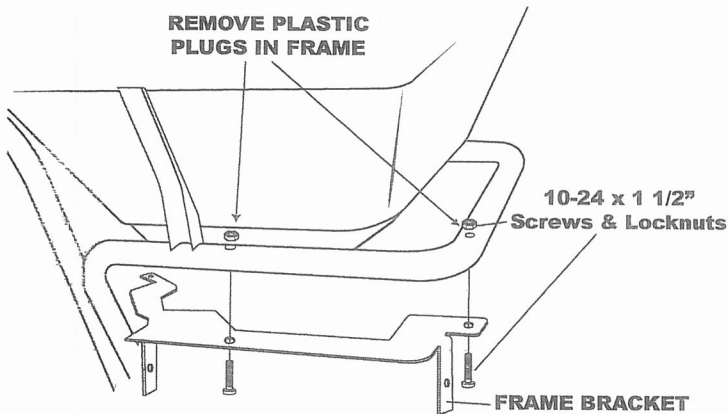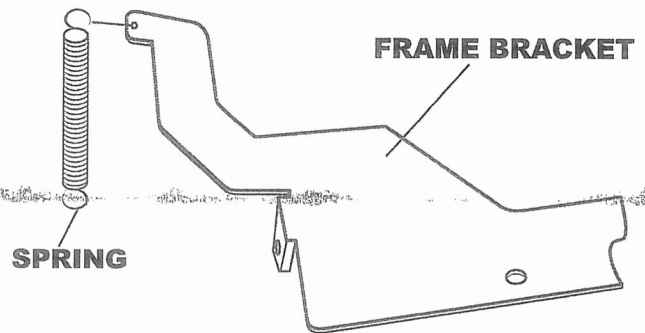

2. Remove the two plastic plugs in the frame. Install the frame bracket on to the frame as shown using (2) #10-24 x 1 1/2" hex bolts and locknuts. Tighten nuts securely.

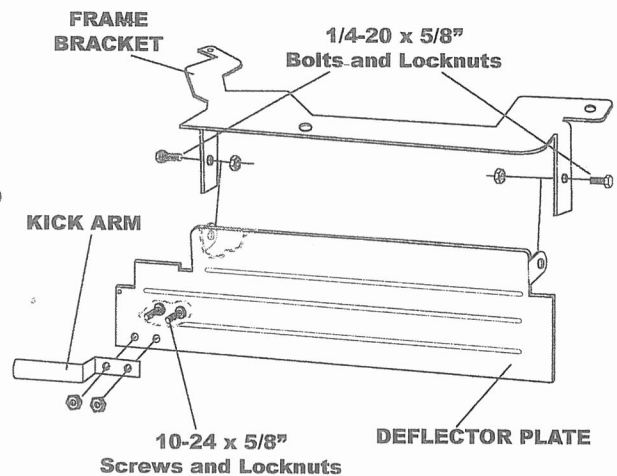

3. Install deflector plate onto the frame bracket as shown using (2) 1/4-20 hex bolts and locknuts. Tighten nuts and then loosen nuts just enough to allow the deflector plate to swing freely. Attach kick arm to deflector as shown using (2) #10-24 x 5/8" screws and locknuts.


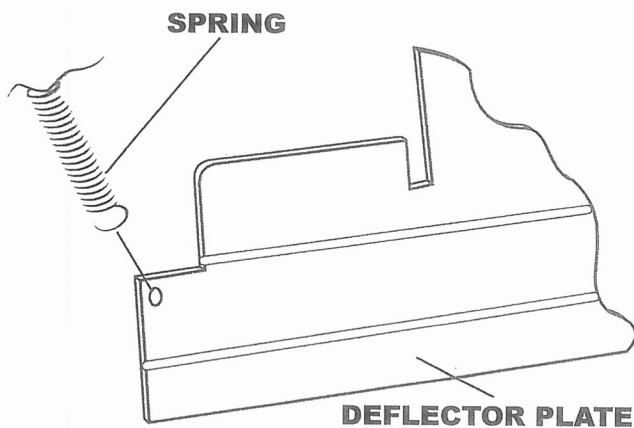


4. Finish assembly by attaching the opposite end of the spring in the hole on the deflector plate as shown.


OPERATION

The deflector can be placed in two positions. The **ON** position (down) or the **OFF** position (up). To operate, simply rotate the deflector plate downward to the **ON** position using the kick plate. The spring will automatically pull the plate down and hold it. Reverse the procedure to position the deflector plate in the **OFF** position (up).

In the **ON** position, the material exiting the right hand side of the spreader is deflected as shown. This allows the spreader to be butted up against a sidewalk, driveway, lot line, etc. minimizing the amount of material thrown into these areas.

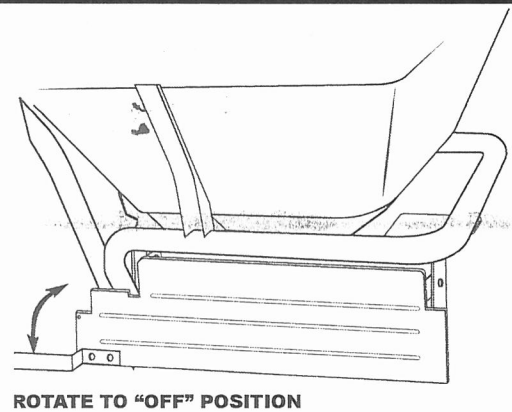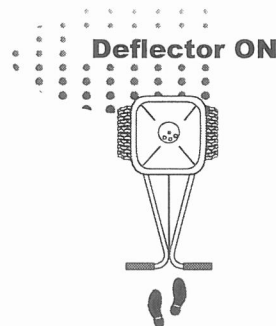

PARTS LIST

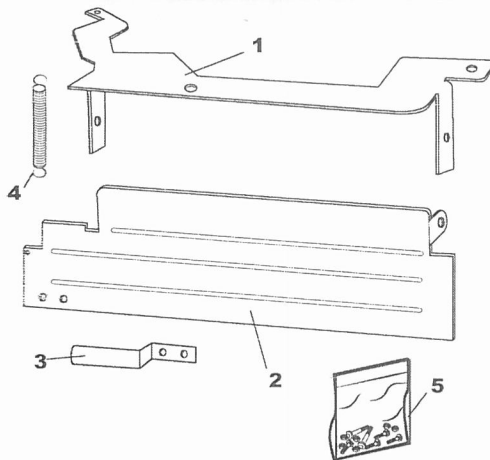

18

Key #	Part #	Description
1	P15651	Frame Bracket
2	P15652	Deflector Plate
3	P15654	Kick Plate
4	P15653	Spring
5	P15686	Fastener Pack

PART OF OUR SERVICE IS PROVIDING REPLACEMENT PARTS. Parts may be obtained through your local distributor. Be sure to give:

- 1. SPREADER MODEL NUMBER**
- 2. SPREADER NAME**
- 3. PART NUMBER**
- 4. NAME OF PART AS SHOWN**